

# ASSEMBLY



Remove the cheekpads as indicated in the communicator's instruction manual.



Place the right speaker (R) in its seat after applying the adhesive round shaped Velcro included in the package.




Repeat the operations performed for the right (R) speaker for positioning the left (L).



Position the microphone by passing the boom under the chinstrap that will be housed in its seat.

# ASSEMBLY

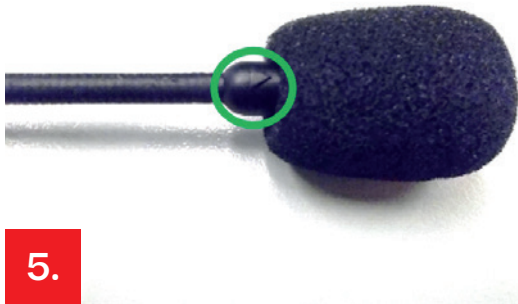

Adjust the microphone's position by deforming its boom.

WARNING check that the triangle on the microphone is facing th mouth.



Remove the inner liner. Place the cables in the gap between the inner and outer shell.



Place the BT controller in the designated slot on the back of the inner shell.



Assemble the cheekpads. Place the USB socket between the cheekpad and the neckroll.

# ASSEMBLY



Pass the flat cable of the remote control between the neckroll's pp plate and the shell. The remote control must remain accessible outside the helmet.



Fit the keypad on the left side (helmet on), approximately 15 mm from the lower edge of the shell using the provided adhesive. Make sure that there is no interference with the chin guard and full contact surface between the adhesive keypad and the outer shell.